

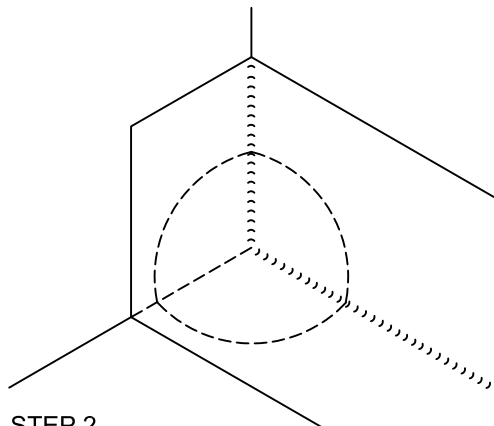
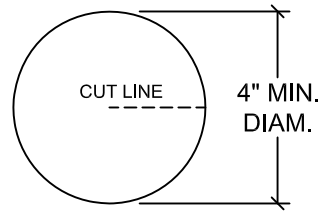



STEP 1

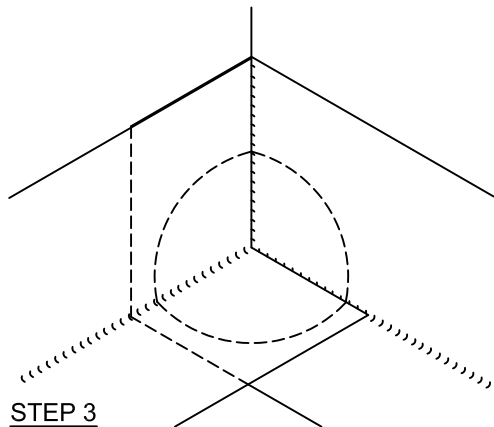

STEP 2

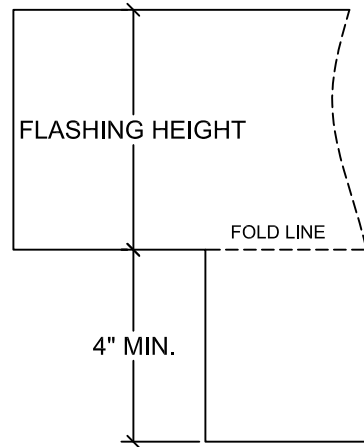

STEP 3

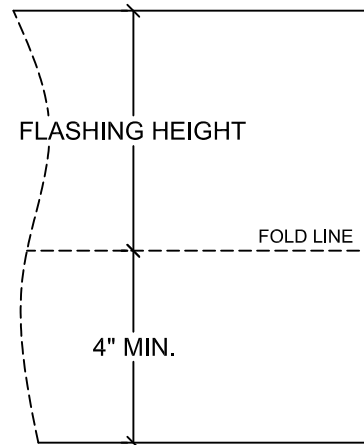

NOTES:

1. APPLICATION OF APPROPRIATE HYDROSEAL PRIMER MUST PRECEDE APPLICATION OF HYDROSEAL FLASHING AND DECK MEMBRANES.
2. ALL HYDROSEAL FLEECE, INCLUDING OVERLAPS, MUST BE SET IN AND COVERED OVER WITH HYDROSEAL RESIN.
3. ALL HYDROSEAL FLEECE SHOULD BE PRE-CUT AND DRY FIT PRIOR TO INSTALLING HYDROSEAL FLASHING RESIN.



HydroSeal
Deck Membrane

AMERICAN HYDROTECH, INC.

INSIDE CORNER
REINFORCEMENT

SCALE: NONE
DATE: 07/19

HS-15A